

Skyline Series Overbed LED Light

Description:

Inspired by the aerodynamic shape of an Airplane Wing, the Amico Skyline Series overbed light offers a sleek and elegant design that meets the needs of both the patient and caregiver. Incorporating the latest in LED technology the Skyline light is designed to provide high quality illumination while meeting the aesthetic requirements of the patient room.

The Skyline Series light is designed with seam-free surfaces and clean edges that eliminate dust traps and make cleaning easy.

Features:

- Reading light
- Ambient light
- Examination light
- Night light
- Antimicrobial finish
- Impact resistant polycarbonate lens
- Slim design
- Seamless end caps



Construction Material:

Housing: Marine Grade Aluminum Extrusion. Housing attaches to mounting plate provided and secured to PEM studs. Unique hinge design on mounting plate for single man install.

Finish: Antimicrobial finish on all exposed aluminum surfaces.

Lens: High Impact, frosted polycarbonate. Extruded to frame for tight fit and infection control.

Light Source: Samsung LED mounted to aluminum core linear boards

Drivers: High power factor constant current, 0.97 pf @ 120 V (Class 2, Class II)

Color Options: Antique white and Silver aluminum finishes

Length Options: Nominal 2' Actual: 26.75" (679.5 mm), Nominal 3' Actual: 38.75" (984.3 mm), Nominal 4' Actual: 50.75" (1289.1 mm)

Specifications:

Voltage: 120 - 277 Volts

Wattage: Total: 112.3 W. Exam: 48.2 W, Ambient: 32.3 W, Reading: 30.0 W

Light Output (4' version): Total: 9,964 lm. Exam: 3,950 lm, Ambient: 3,321 lm, Reading: 2,739 lm

Dimming: 0 - 10 Volts and DALI options available


Color Quality: 80 CRI, 90 CRI

Color Temperature: 3000K, 3500K, 4000K

Life of LEDs: L70 50,000 hours


Warranty: Limited five (5) year warranty

Dimensions:

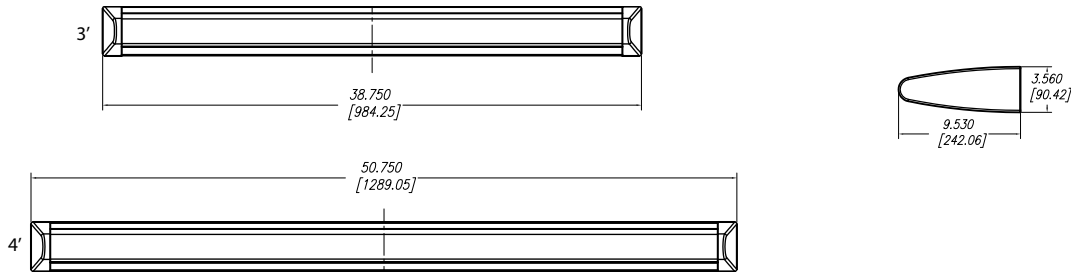

Ordering Guide:

L-SKY -



Example: L-SKY-2-120-LED30-1/2-LVC-SLV-BS

Skyline Series, 2, 120 V, 3000 Kelvin, 1 up / 2 down (standard), Low voltage controller, Silver finish, Bed stop

Ordering Information:

Series	Length	Voltage	Colour Temperature	Lamp Configuration	Switching	Custom Options	Options
L-SKY	2	120	LED 30 3000 K	1/2 1 up / 2 down (standard)	000 No switch	000 No custom options	00 No options
	3	277	LED 35 3500 K	1/1 1 up / 1 down	LVC Low voltage controller	SLV Silver finish (min quantity of 25)	BS Bed stop
	4	347	LED 40 4000 K	2/1 2 up / 1 down	LMS LightMaster relay	<i>consult factory for other options</i>	BP Emergency battery pack (<i>consult factory</i>)
			<i>consult factory for other options</i>	2/2 2 up / 2 down	LVD Low voltage controller & dimming		NL Night light
				<i>consult factory for custom configurations</i>	LMD LightMaster control & dimming		BN Bed stop & night light
					1PC Single pull chain		BB Bed stop & battery pack
					2PC Dual pull chain		NB Night light & battery pack
					1PR One pull chain & rocker switch		AL Bed stop, battery pack & night light
					2PR Two pull chain & rocker switch		
					1RS Single rocker switch		
					2RS Two rocker switches		
					LVR Low voltage controller and rocker switch		
					LVP Low voltage controller and pull chain		
					LDR Low voltage controller, Dimming, Rocker Switch		
					LDP Low voltage controller, dimming & pull chain		

NOTE: Minimum of 100 units required for custom color option